


## HOW DO I SWITCH THE DEVICE ON & OFF?

- **ON/OFF:** Press the power button in on the left side of the device

To **REBOOT** device, hold the on button in until menu appears where you press 'reboot'

## HOW TO MAKE A SALE:

- Once device is switched on, the Nedbank App will launch
- Enter the amount and press 'Confirm'
- Device will display: TOTAL: 'Amount'
- Customer can complete the transaction
  - Chip & Pin
  - Swipe & Sign (if card does not have chip)
  - Tap & Go
- Device will display: 'Transaction Approved'
- Options for next steps:
  - Print Customer Copy / Skip

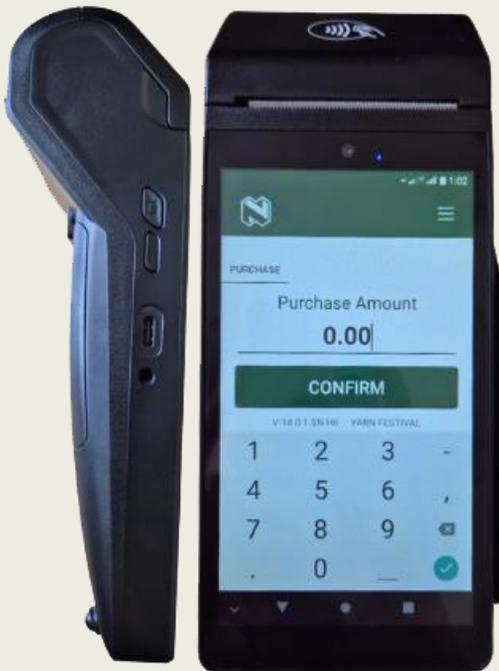

[support@wappoint.co.za](mailto:support@wappoint.co.za)  
**021 3000 121**  
[www.wappoint.co.za](http://www.wappoint.co.za)

## HOW DO I REPRINT A SLIP?

- In the menu button in the top right corner
- Select 'Reporting'
- Select 'Receipts'
  - ID = 1
  - Pin: 12345
- Select 'Last Receipt' or 'Specific Receipt';
- If 'last receipt' selected. Device will reprint the last transaction
- If 'Specific Receipt' selected: Enter Receipt Number, you would like to reprint and press 'confirm'

## MANUAL END-OF-DAY CASH UP:

- Menu button top right
- Merchant Configuration
- Select 'Batch Upload'
  - User ID = 1
  - User Pin 12345
  - Login

**\*This should be done at the end of each day**

## HOW TO SETUP DEVICE ON WIFI (OPTIONAL):

- From the Home screen, select 'System'
- Enter Supervisor Login
  - User ID: 1
  - User Pin: 12345
- Select 'WiFi'
- Select Wifi Connection, enter wifi password and click 'Connect'